


Please read instructions carefully prior to assembly. Scan QR code below for more product information.



40mm actual size



## Included Parts

1. Keystone
2. Cable tie
3. Cover (optional)
4. Wire manager

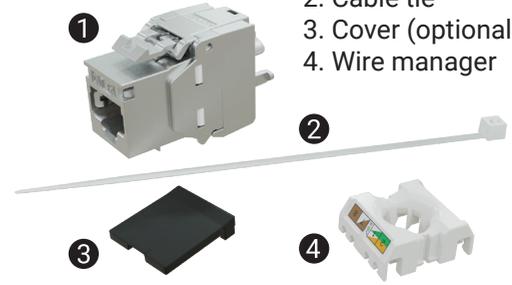


## Category 6A Keystone Socket T3R45J-C6AS-ME

Field assembly instructions for installers

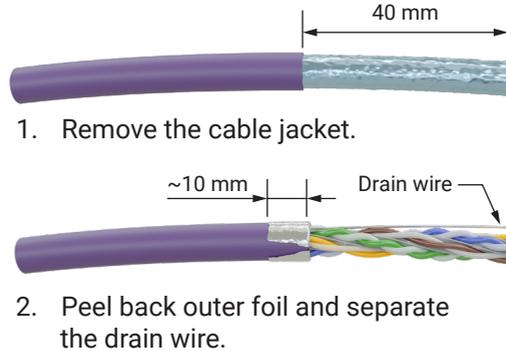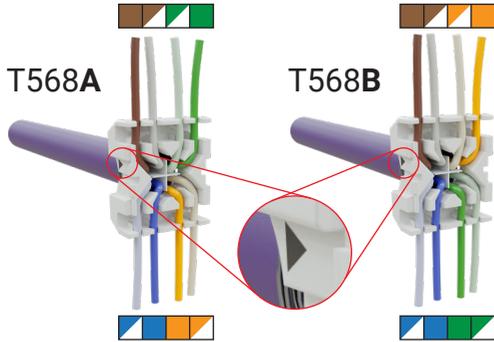

1. Remove the cable jacket.

2. Peel back outer foil and separate the drain wire.

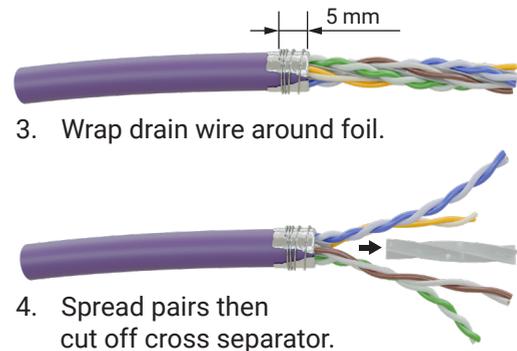


3. Wrap drain wire around foil.



4. Spread pairs then cut off cross separator.

5. Insert wires through wire manager then secure each wire into its respective position.


(T568B shown here)

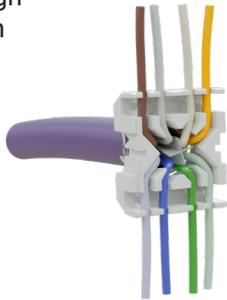


6. Cut off excess wires, taking care to cut flush to the wire manager.

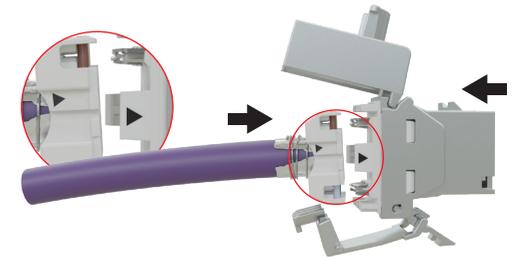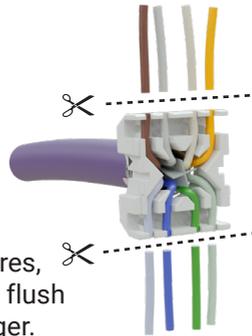


7. Insert wire manager into keystone body, ensuring that the arrow on both are aligned on the same side.

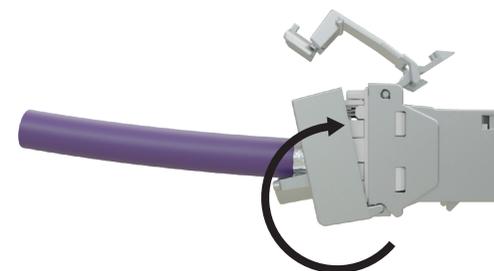

8. Close back cover.

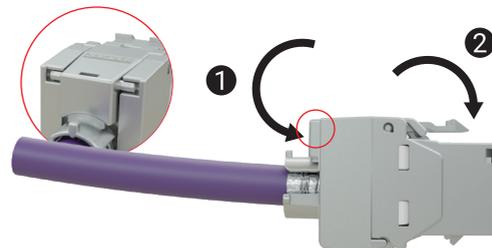

9. Close latch in two steps. Lugs must be in notches as shown above.

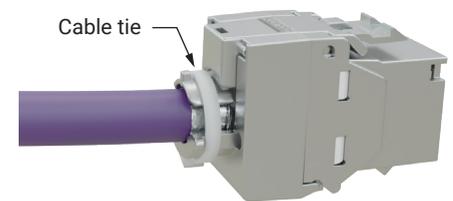

10. Ensure the cable drain wire and foil are in contact with the cable fixture.
11. Affix cable tie and cut off excess.